SOLDERING

At start, and every few connections: clean tip of iron on damp sponge, apply thin layer of solder

adafruit

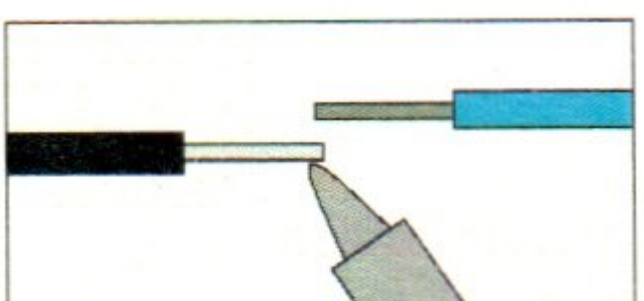

Remove insulation
Pre-tin each wire

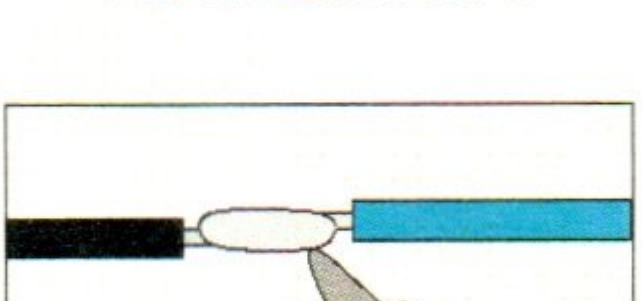

Put pre-tinned wires together
Touch with hot soldering iron

Anode Cathode

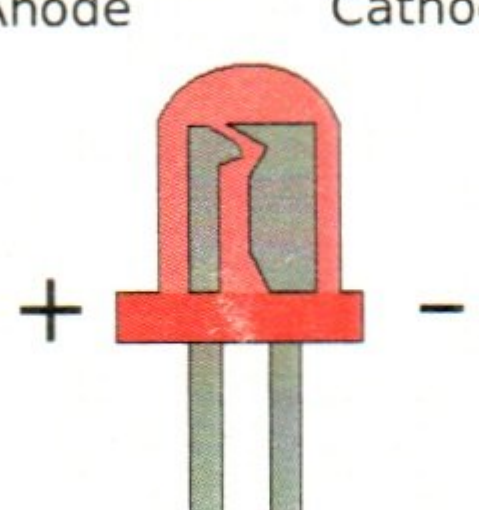

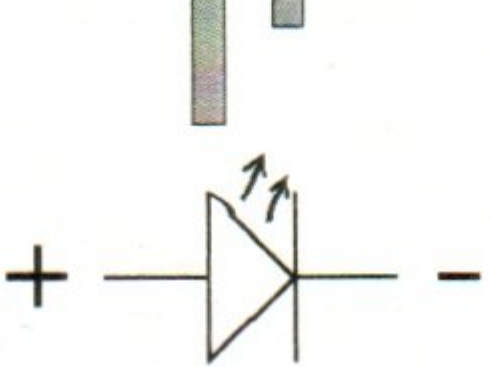

Timo Schindler
CC-BY-SA 4.0